

Adjusting to Bad Driving Conditions – Heat Infographic



SAFETY TIPS FOR DRIVING HOT WEATHER



CHECK TYRES

Before driving ensure you check the tire pressures are set to manufacturers specifications. Tyre condition should be checked before travelling and regularly during your journey for signs of failure and excess temperature, stop if you see signs of either.



ENGINE OIL

Hot weather puts all your engines components to the test. Make sure the engine oil is at the correct level and in good condition. Keep an eye on your engine oil temperature and pressure during your journey.



COOLING SYSTEM

Perform a visual inspection of your cooling system before departing. Check for signs of leakage and fatigue on cooling system hoses and around any clamps. Check the condition and level of coolant before departure, while travelling make sure the cooling system remains within the normal operating range.



CHECK BATTERY

Hot weather also places additional strain on your vehicles battery. Make sure that terminals are clean and secure ensure the batteries are mounted correctly.



DRIVE BELTS

Ensure you have checked the condition of both the belts and any tensioners that are fitted to your vehicle. The belts are critical in both the cooling and charging systems on your vehicle.

Source: <https://adamstransportequipment.com>